

# 5 in 1 LED Controller ( 2.4GHz ) Instruction Manual

### **Contents**

Product features	2
Set up output mode	3
PUSH Dimming	3
Compatible with remote	3
2.4G RF remote control instruction	4-7
Link / Unlink Instructions	4
Auto transmitting & Synchronization	5
Dynamic mode table selection	5
PWM frequency switching	6
"Do Not Disturb" mode is activated and shut down	7
DMX512 LED transmitter control instruction	8
Attention	9

## **Product features**

Made by new 2.4GHz wireless transmitting technology with low power consumption, strong ability to build network automatically and anti-interference. with MiBoxer 2.4GHz gateway to get wireless dimming color, remote control, timing control, group control, music rhythm function. Support 2.4G RF remote control.



16 Millions of colors to choose



Color temperature adjustable



Dim brightness / Saturation



2.4G RF wireless transmission technology



Remote control distance 30m



Auto-transmitting & Synchronization



Support Smartphone app control (2.4GHz gateway is needed)



Support third party voice control (2.4GHz gateway is needed)



DMX512 controllable

(Only for RGB+CCT output mode DMX512 LED transmitter is needed)

## Set up output mode

Set up correct output mode based on the feature of lights
Setting method: Press "SET" button continuously to switch output mode (attention: it will log out without operation within 3 seconds)

Output mode sheet (confirm output mode based on color of indicator)

Indicator color	White Light	Yellow Light	Red Light	Green Light	Blue Light
Output	Single Color	Dual White	RGB	RGBW	RGB+CCT

# **PUSH Dimming**

#### Short press PUSH switch:

Turn ON/OFF light

#### Long press PUSH switch:

- Stepless dimming brightness.
- Long press and release your finger, then repeat long pressing to increase or decrease brightness.



# Compatible with these 2.4G RF remote controls (Purchased separately)





B0 / B0-B

HBOOLEK.

B4 / B4-B / T4



B3 / B3-B / T3



 
S2W+



 
WL-Box2

## 2.4G RF Remote control instruction

## 1). Linking Code Instructions








Power off 10 seconds and power on again or short press "SET" one time or turn on light via PUSH switch Short press " I " button 3 times within 3 seconds.

Lights blink 3 times slowly means linking is done successfully.




Linking failed if light is not blinking slowly, Please follow above steps again. (Note: Light that have linked can't link again)

## 2). Unlinking Code Instructions

 



 

Power off 10 seconds and power on again or short press "SET" one time or turn on light via PUSH switch Short press " I " button 5 times within 3 seconds.

Lights blink 10 times quickly means unlinking is done successfully.



Unlinking failed if light is not blinking quickly, Please follow above steps again. (Note: Light haven't linked that don't need to unlink)

#### 3). Auto transmitting & Synchronization (only for remote control)

#### Remote signal auto transmitting

One light can transmit the signals from the remote control to another light within 30m, as long as there is a light within 30m, the remote control distance can be limitless

#### Dynamic modes auto synchronization

Multi lights can synchronize if they are in same dynamic mode and linked with same remote (distance between each light is within 30m)



#### 4). Dynamic mode table selection (only for remote control)

#### Select dynamic mode table 1:

While the light is in static mode, short press "S+" button 5 times quickly until blue light flashes 3 times slowly, static mode is activated successfully.

#### Select dynamic mode table 2:

While the light is in static mode, short press " **S-**" button 5 times quickly until yellow light flashes 3 times slowly, static mode is activated successfully.

#### Dynamic mode table 1 (default)

Number	Dynamic Mode	Brightness / Saturation / Speed	
1	Mardi Gras		
2	Automatic color change		
3	Sam		
4	Gemstone		
5	Twilight	Adjustable	
6	American		
7	Fat Tuesday		
8	Party		
9	Slow Color Splash		

## Dynamic mode table 2 (need to switch manually)

Number	Dynamic Mode	Brightness / Saturation / Speed		
1	Seven colors gradual change			
2	White light Gradual change			
3	RGB gradual change			
4	Seven colors jump to change			
5	Jump to change randomly	Adjustable		
6	Red light gradual change +Flash 3 times			
7	Green light gradual change +Flash 3 times			
8	Blue light gradual change +Flash 3 times			
9	White light gradual change +Flash 3 times			

# 5). PWM high frequency / low frequency switching (only for remote control)

#### Switch to high frequency:

Press "OFF" button 1 time within three seconds and press "ON" button 5 times, Activated successfully once led light flashes 2 times quickly.

#### Switch to low frequency:

Press "ON" button 1 time within three seconds and press "OFF" button 5 times, Activated successfully once led light flashes 2 times slowly.

#### 6). "Do Not Disturb" mode is activated and shut down (default activated)

Turn on "Do Not Disturb" mode (wide using in the area which have power failure frequently to save energy)

#### 2.4G RF Remote turn on and turn off instruction

#### Turn on "Do Not Disturb" mode:

Press "OFF" button three times within three seconds and press "ON" button three times, Activated successfully once led light flashes four times quickly.

#### Attention: Do not disturb mode is activated

- When the light is OFF status (For example: Use app or remote to turn off light)
   The light is OFF status once you turn off power and turn on again.
   (User must turn off and turn on power twice times to activate light or use APP / remote to activate light)
- 2. When the light is ON status

The light is ON status once you turn off and turn on power one time.


#### Turn off "Do Not Disturb" mode:

Press "ON" button three times within three seconds and press "OFF" button three times, closed successfully once led light flashes four times slowly.

**Attention:** The light will be always "ON" status if you turn on and turn off power once user closed "Do Not Disturb" mode.

## DMX512 LED Transmitter Control (Purchased separately)


Only for RGB+CCT output mode

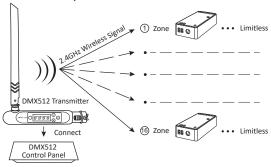

### **DMX512 LED Transmitter Link/Unlink**

 Follow instruction of DMX512 transmitter (FUTD01), Choose the zone for the light by pressing "+" or "-" (e.g. "CH12" means zone 12)







#### Link

The controller is powered off for 10 seconds and then powered on, or press "SET" button 1 time.

Short press "" 3 times within 3 seconds while the indicator of controller is ON

Link is done once indicator of controller flashes 3 times slowly

#### Unlink

The controller is powered off for 10 seconds and then powered on, or press "SET" button 1 time.

Short press " 5 times within 3 seconds while the indicator of controller is ON Unlink is done once indicator of controller flashes 10 times quickly



If the link or unlink failed, please follow the above steps again.

#### **Attention**

- 1. Please turn off power supply before installation.
- 2. Please ensure input voltage to be same as requirements from device.
- 3. Don't disassemble device if you are not expert, otherwise it will damage it.
- Please do not use the light in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affected.



Scan QR code to watch 2.4GHz series video instruction Or enter into following link directly https://miboxer.com/light/video/1pc\_remote.html

